



# ATLANTIS WATER BOILER



INSTALLATION & USER MANUAL

# INSTALLATION PROCEDURE

## **WATER CONNECTION**

CONNECT THE LONG FLEXI HOSE FROM THE WATER BOILER TO A WASHING MACHINE TAP (COLD WATER SUPPLY) WITH ¾" BSP MALE THREAD.

IF AN IN-LINE FILTER IS BEING INSTALLED, CONNECT THE SHORT FLEXI HOSE TO THE MAIN WATER SUPPLY AND ON TO THE **INLET** SIDE OF THE FILTER (THE ARROW ON THE FILTER GIVES DIRECTION OF FLOW). CONNECT THE BOILER HOSE TO THE **OUTLET** OF THE FILTER.

## **POWER CONNECTION**

**3KW MACHINE** - INSERT THE MOULDED 3 PIN 13 AMP PLUG IN TO SUITABLE SOCKET.

**6KW MACHINE** - WIRE THE MACHINE CABLE TO A MAINS SPUR (BROWN = LIVE: BLUE = NEUTRAL: GREEN/YELLOW = EARTH).

TURN THE WATER BOILER ON USING THE BLACK NEON SWITCH ON THE RIGHT HAND SIDE OF THE MACHINE.

THE MACHINE WILL FILL AUTOMATICALLY INDICATED BY THE GREEN NEON. WHEN THE WATER REACHES THE FIRST LEVEL IT WILL STOP FILLING AND THE GREEN LIGHT WILL GO OUT.

THE RED LIGHT WILL COME ON TO INDICATE THE MACHINE IS HEATING. WHEN IT REACHES THE CORRECT TEMPERATURE THE RED LIGHT WILL GO OFF. THE MACHINE IS READY TO USE.

THE MACHINE WILL AUTOMATICALLY REPEAT THE ABOVE PROCEDURE (FILLING AND HEATING ALTERNATIVELY) UNTIL THE BOILER IS COMPLETELY FULL OF WATER AND ALSO DURING USE TO ENSURE THE BOILER STAYS FULL.

***NB: THE BOILER TEMPERATURE IS SET AT 90-92 DEGREES C. SHOULD YOU FEEL IT NECESSARY TO ALTER THE TEMPERATURE THIS CAN ONLY BE CARRIED OUT BY A FRACINO ENGINEER WITH THE CORRECT PROGRAMMING DEVICE.***

## **WARNING**

PLEASE ENSURE THE MAINS WATER SUPPLY TO THE MACHINE IS ALWAYS SWITCHED ON DURING USE.

THIS IS A COMMERCIAL MACHINE AND OPERATIVES MUST BE DULY TRAINED ON ITS USE FOR HEALTH & SAFETY REASONS.

# WARRANTY TERMS & CONDITIONS

- 1) **FRACINO** CAPPUCCINO COFFEE MACHINES ARE GUARANTEED TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP DURING MANUFACTURE FOR A PERIOD OF 12 MONTHS FROM THE INITIAL INSTALLATION.
- 2) LIABILITY UNDER THE WARRANTY IS LIMITED AT THE OPTION OF THE MANUFACTURER TO THE REPLACEMENT OR REPAIR , FREE OF CHARGE, OF SUCH PARTS AS SHALL BE ACKNOWLEDGED AFTER MANUFACTURERS INSPECTION TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP, PROVIDED THAT ANY SUCH CLAIMS UNDER THIS WARRANTY ARE NOTIFIED TO THE MANUFACTURER WITHOUT DELAY. ALL PARTS RECOGNISED AS DEFECTIVE SHALL BECOME THE PROPERTY OF THE MANUFACTURER.
- 3) EXCEPT INSOFAR AS ANY INJURY, DAMAGE OR LOSS IS CAUSED BY THE NEGLIGENCE OF THE MANUFACTURER OR ITS EMPLOYEES AND INSOFAR AS EXCLUSION IS NOT PROHIBITED OR NEGATED BY LAW THIS WARRANTY IS IN SUBSTITUTION FOR ANY EXPRESS OR IMPLIED GUARANTEE, REPRESENTATION WARRANTY OR CONDITION AND THE MANUFACTURER SHALL NOT BE LIABLE FOR ANY INJURY, DAMAGE OR LOSS DIRECTLY OR INDIRECTLY ATTRIBUTED TO ANY OR DONE IN CONNECTION HEREWITH.
- 4) THE UNEXPIRED PART OF THIS WARRANTY MAY BE TRANSFERRED TO ANOTHER OWNER PROVIDING THE MACHINE HAS BEEN SERVICED AND MAINTAINED BY THE MANUFACTURER OR MANUFACTURERS AUTHORISED SERVICE AGENT AS PRESCRIBED AND REMAINS IN THE SAME LOCATION .
- 5) THE WARRANTY SHALL CEASE IMMEDIATELY IF:
  - a) THE MACHINE IS MODIFIED OR ADDED TO IN ANY WAY NOT PREVIOUSLY AGREED WITH THE MANUFACTURER IN WRITING.
  - b) THE INSTRUCTIONS CONTAINED IN THE OPERATORS MANUAL ARE NOT COMPLIED WITH.
  - c) THE MACHINE IS INSTALLED SERVICED , RELOCATED OR MAINTAINED BY ANYBODY OTHER THAN THE MANUFACTURER OR MANUFACTURERS AUTHORISED SERVICE AGENT.
- 6) THE WARRANTY DOES NOT COVER ITEMS THAT REQUIRE REPLACEMENT IN THE COURSE OF MAINTENANCE OR AS A RESULT OF FAIR WEAR & TEAR. NOR DOES IT COVER LIMESCALE RELATED FAULTS.
- 7) **KINDLY OBSERVE THE FOLLOWING IN YOUR BEST INTERESTS:**
  - a) WE RECOMMEND USING ONLY **FRACINO** ORIGINAL PARTS EXPLICITLY APPROVED BY THE MANUFACTURER. THESE PARTS HAVE BEEN SELECTED FOR THEIR RELIABILITY AND SUITABILITY FOR **FRACINO** MACHINES.
  - b) WE ARE UNABLE TO MAKE ASSESSMENTS FOR OTHER PRODUCT PARTS AND THEREFORE CANNOT BE HELD RESPONSIBLE FOR THEM, EVEN IF IN INDIVIDUAL CASES AN OFFICAL APPROVAL OR AUTHORISATION BY GOVERNMENTAL OR APPROVAL AGENCIES EXIST.
  - c) **FRACINO** ORIGINAL PARTS AS APPROVED CAN BE OBTAINED FROM THE FACTORY. COMPREHENSIVE ASSISTANCE AND ADVICE ON MAINTAINING YOUR MACHINE AT ITS OPTIMUM LEVEL CAN BE OBTAINED FROM **FRACINO**.
- 8) WE AT **FRACINO** WISH YOU MANY YEARS OF SATISFACTION WITH YOUR NEW CAPPUCCINO COFFEE MACHINE. PLEASE KEEP THIS WARRANTY AND OPERATOR INSTRUCTIONS IN A SAFE PLACE ONCE YOU HAVE READ THE IMPORTANT INFORMATION CONTAINED HEREIN.

## ITEMS NOT COVERED BY WARRANTY

- 1) **LIME SCALE** - ANY CALLS TO BREAKDOWNS CAUSED BY SCALE RELATED FAULTS.
- 2) **MISUSE/BREAKAGES** - ANY CALLS BEING MADE AS A RESULT OF ACCIDENT, NEGLIGENCE OR OPERATOR MALPRACTICE, AND ANY OTHER CALLS FOR, OR AS A RESULT OF EQUIPMENT RELOCATION. **NB:** THIS ALSO APPLIES TO OVERTIGHTENED STEAM & WATER VALVE HANDLES.
- 3) **COFFEE VOLUMES** – ANY CALLS TO ALTER THE PROGRAMMING OF COFFEE VOLUMES AFTER INITIAL INSTALLATION.
- 4) **BLOCKED WASTE** - ANY CALLS DUE TO THE WASTE PIPE BEING BLOCKED. THIS IS GENERALLY CAUSED BY GROUTS BEING FLUSHED THROUGH THE DRIP TRAY OR POOR PLUMBING.
- 5) **BLOCKED STEAMER** - ANY CALLS, FOR "NO STEAM" CAUSED BY THE OUTLET HOLES ON THE STEAMER NOT BEING CLEANED.
- 6) **BLOCKED GROUPS** - ANY CALLS TO "NO WATER/COFFEE COMING THROUGH GROUP" CAUSED BY THE GROUPS NOT BEING CLEANED.
- 7) **BLOCKED RAPIDO** - ANY CALLS TO RAPIDO FROTHER "NOT FROTHING" CAUSED BY RAPIDO NOT BEING CLEANED.
- 8) **MILK NOT FROTHING** – ANY CALLS RELATED TO "MILK NOT FROTHING" CAUSED BY STALE MILK OR MILK WITH HIGH PROTEIN CONTENT.
- 9) **GRINDERS** - THE REPLACEMENT OF THE GRINDING BLADES. ANY CALLS TO RESET PORTIONING OR COFFEE GRIND OR TO JAMMED/OBSTRUCTED BLADES.
- 10) **WATER TREATMENT** - ANY CALLS TO REPLACE A WATER TREATMENT UNIT (DSU).
- 11) **KNOCKOUT DRAWERS** – ANY CALLS TO REPAIR JAMMED OR BROKEN RUNNERS AS A RESULT OF NEGLIGENCE, MALPRACTICE OR MISUSE BY THE OPERATOR.
- 12) **TRAINING** - TRAINING ON USE AND DAILY MAINTENANCE OF THE EQUIPMENT IS GIVEN AT THE TIME OF INSTALLATION. ANY CALLS FOR FURTHER TRAINING OR FOR TRAINING ON A DAY OTHER THAN THAT OF INSTALLATION WILL BE FULLY CHARGEABLE.



18-22 BIRCH ROAD EAST  
BIRMINGHAM  
B6 7DB

TEL: + 44 (0)121 328 5757  
FAX: + 44 (0)121 327 3333