


Romano-R

Supplement to the User Manual - Fracino Coffee Machines




Display and Keypad Overview

1st screen

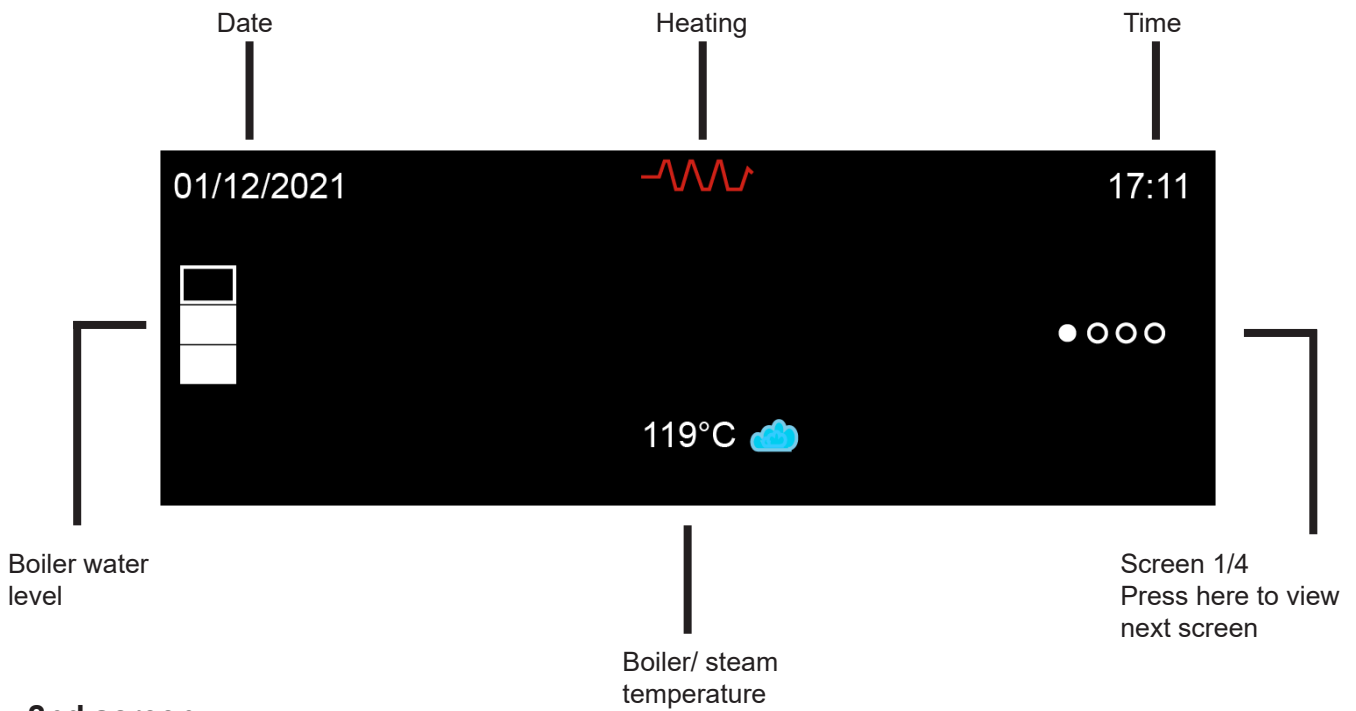


2nd screen

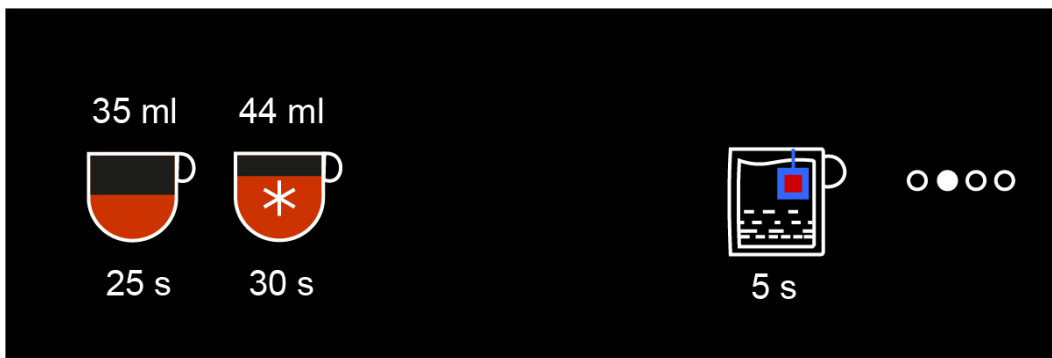


This screen can be used when dispensing a drink to view the shot time and volume. The time and volume from the previous drink will be displayed until a new drink is made.

3rd screen

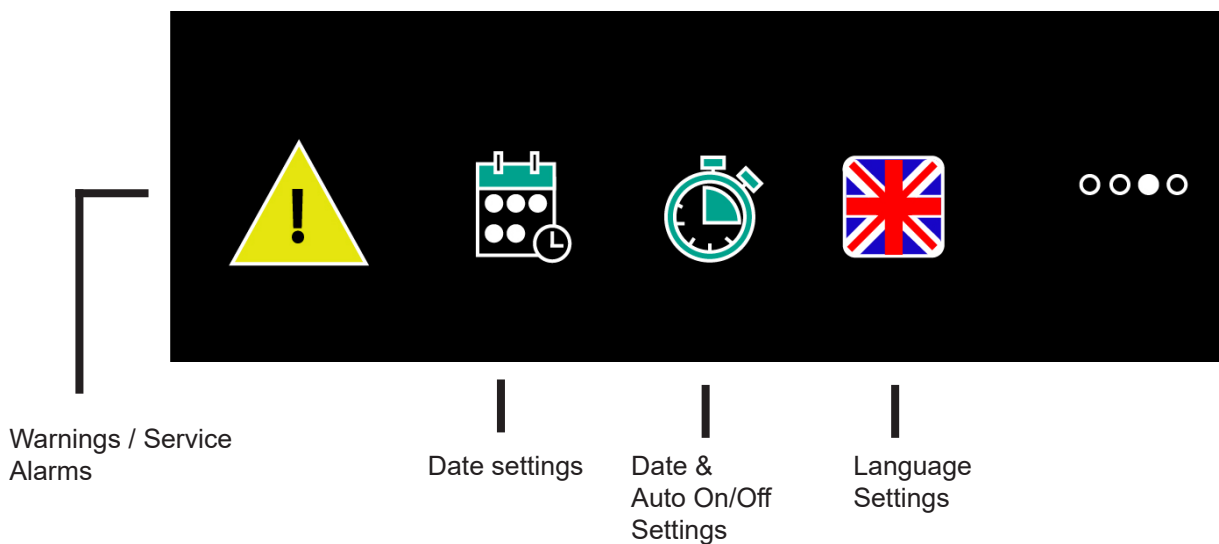

4th screen

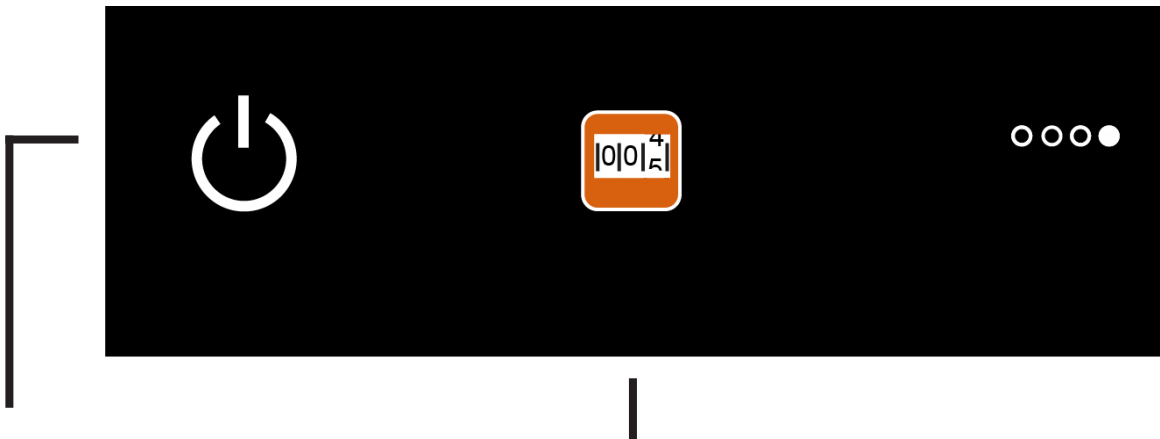

'OFF' - switches the Heating Element off. Press to enter technical menus.

Coffee counters


Start Up

NOTE: For installation instructions, please refer to the Installation Manual supplied with the machine.

1. On the initial start up, immediately after installation, turn the machine on using the black rocker switch on the front panel behind the right hand steam tube. The blue light should illuminate indicating the power is on. The control panel should also illuminate.




2. After a second or two the boiler will begin to fill, this is observed on the boiler water level fill indicator on the display. The water level can also be observed on the sight glass on the left hand side of the machine. It may take several minutes for the boiler to fill.

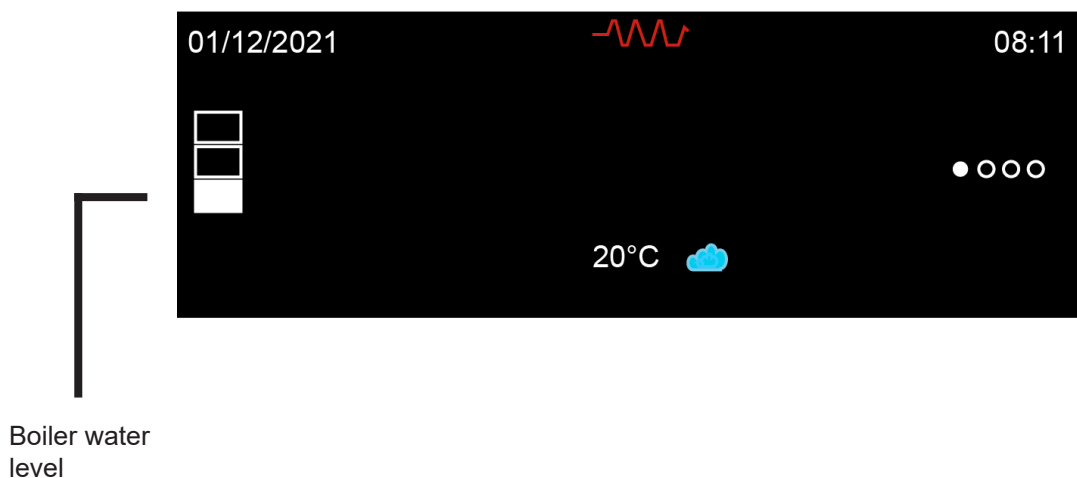


NOTE: The machine may time out during the filling. This will be indicated by a buzzer and a warning on the display. Turn the machine off using the mains on/off switch, wait 5 seconds and turn on again. The machine will then continue to fill.


3. Once the boiler has filled press the continuous flow button on each group until water appears from the bottom of the groups. This is to ensure the heat exchangers are full of water.

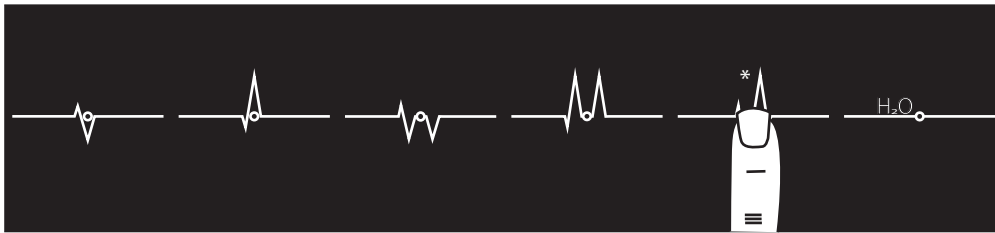

4. The boiler heating is indicated by the symbol at the top of the display, and the boiler/steam temperature is indicated by the symbol at the bottom of the display. It is good practice to open the steam valve whilst the machine heats this is done by turning one or both of the steam valve handles anti-clockwise. Close the steam valves once steam starts to appear from the steam tube nozzle, the steam pressure will build until it reaches 1 - 1.2Bar which is indicated on the right hand side of the pressure gauge.

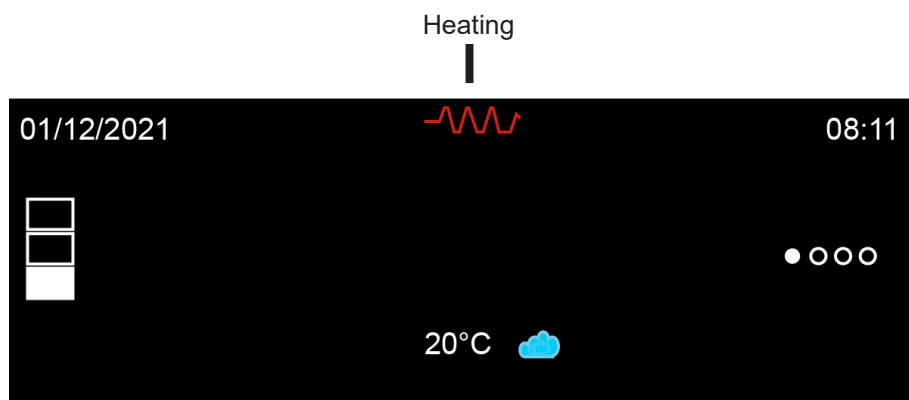

Boiler/ steam temperature

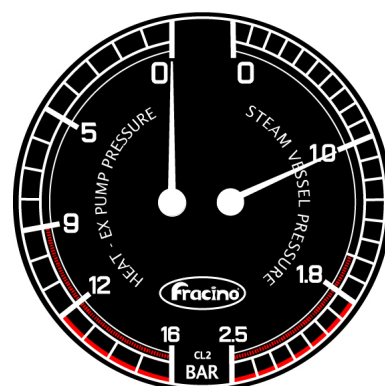


5. It is advisable to leave the machine with the filter holders inserted in the groups for 10 - 15 minutes to allow them and the groups to get hot and stabilise their temperature.


Date, Time, Auto On/Off & Language Settings

Date & Time


1. Press in the area of the 4 circles on the right hand side of the screen until you reach the 3rd screen.

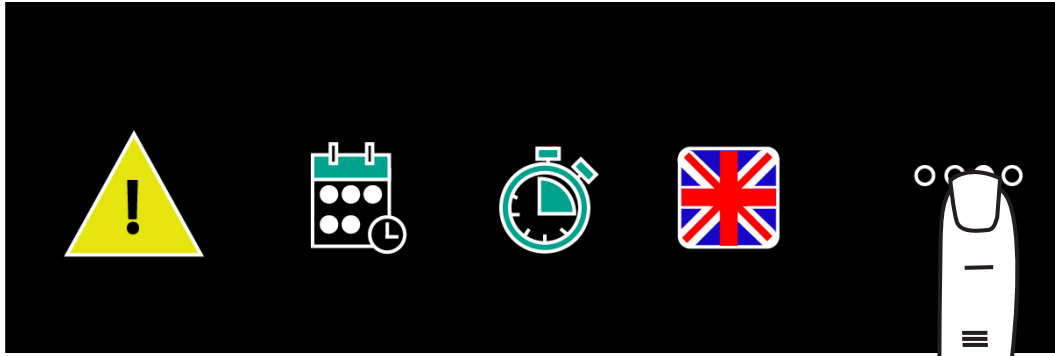

2. To set the date and time press the calendar icon. Use the enter icon to select and use the left and right arrows to scroll.

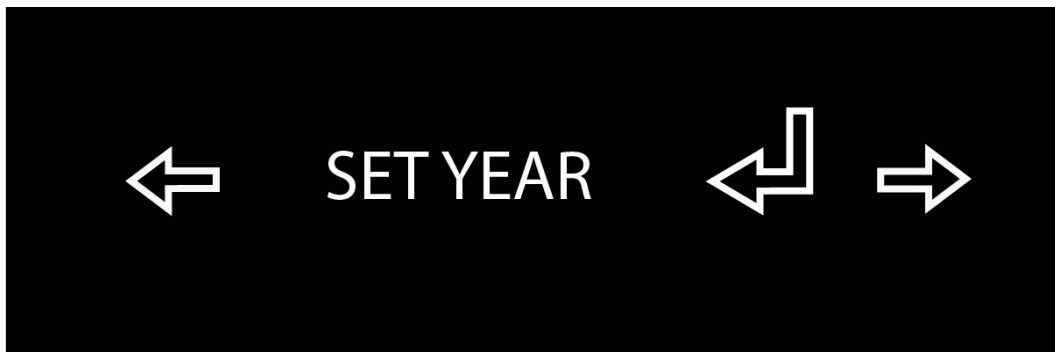


3. Use the plus and minus icons to scroll, use the enter icon to select and use the X icon to go back to the previous screen.

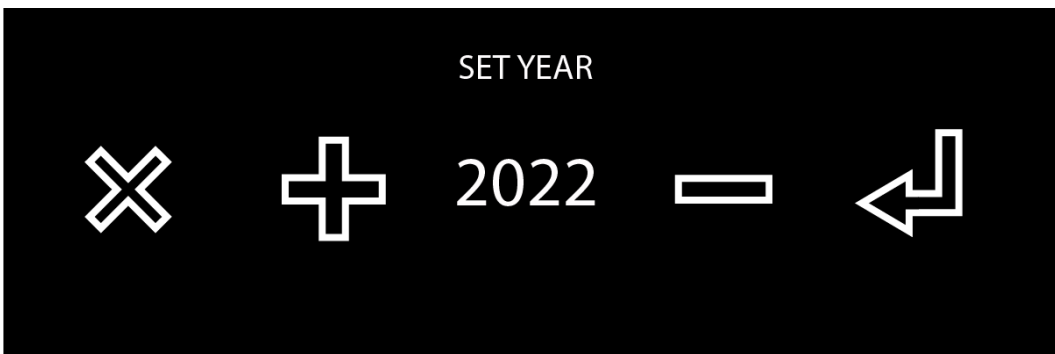


4. Repeat the same steps for the month, day, hour, minutes and day of the week settings.

Auto On/Off


1. Press the stopwatch icon to enter the Auto On/Off settings menu.

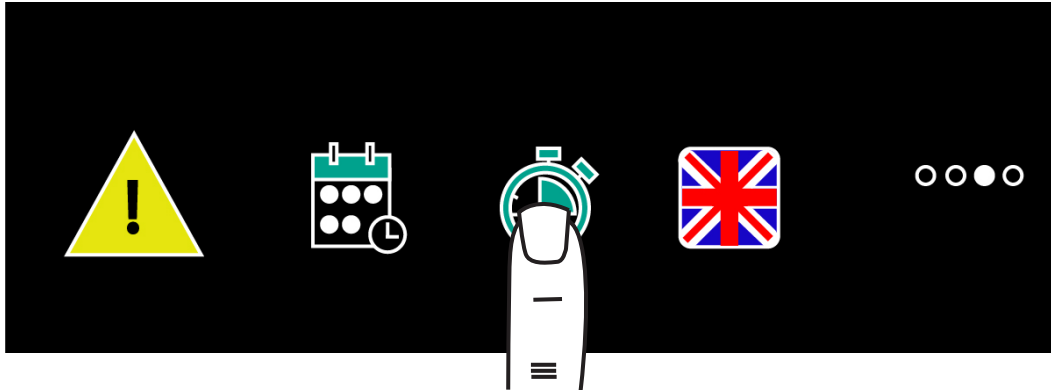

2. Use the enter icon to select and use the left and right arrows to scroll through the menu.

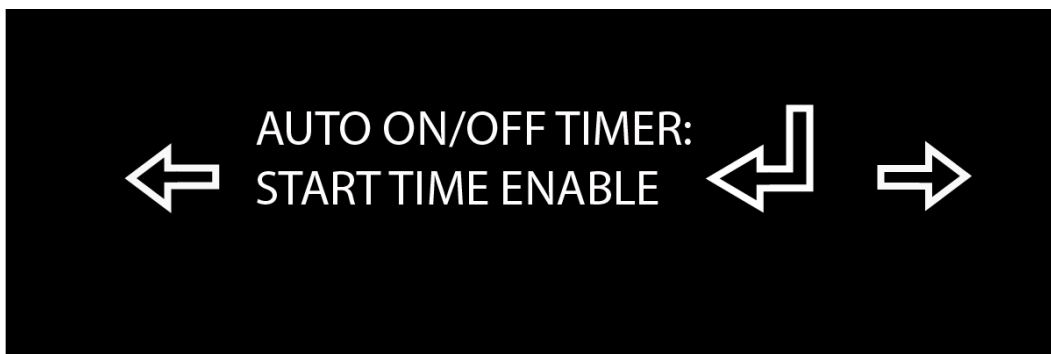


3. Use the plus and minus icons to scroll, use the enter icon to select and use the X icon to go back to the previous screen.

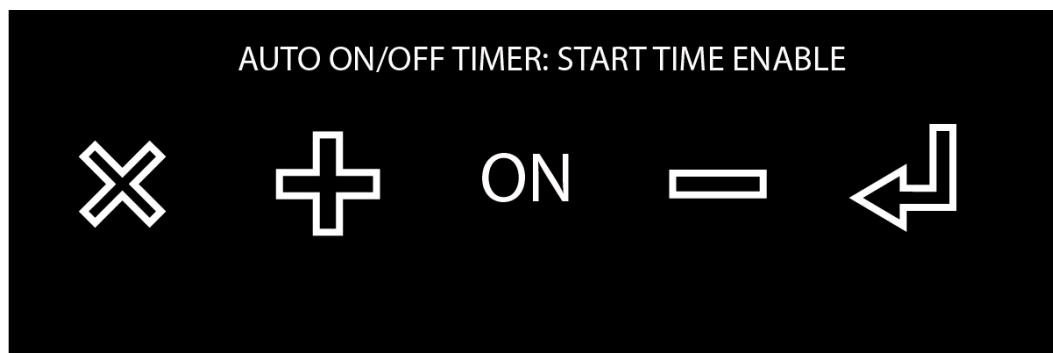


4. Repeat the same steps for the start time hour, start time minute, stop time enable, stop time hour, stop time minute and day off settings.

Languages

1. Press the flag icon to enter the Language settings menu.

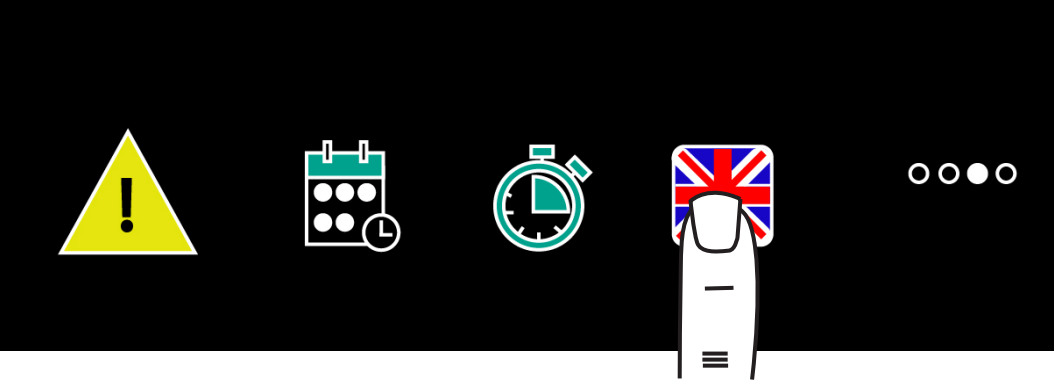

2. Use the plus and minus icons to scroll, use the enter icon to select and use the X icon to go back to the previous screen.

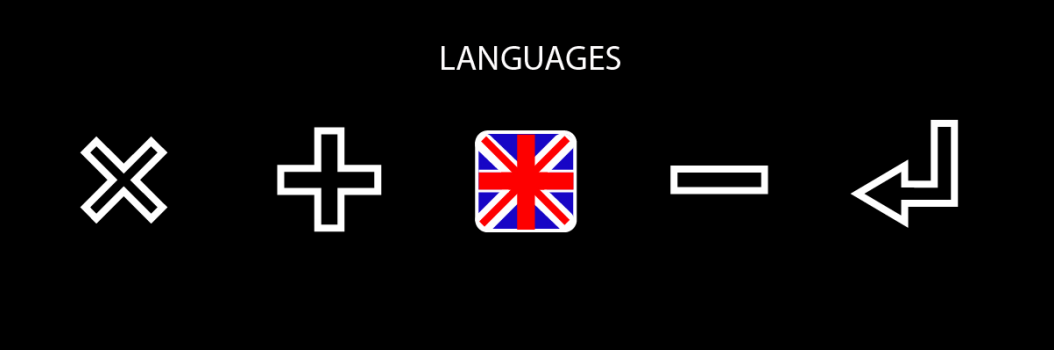


Coffee counters

1. Press the counter icon to enter the counters screen



2. Drinks total per button will be displayed per group, press the right arrow to scroll through the counters.

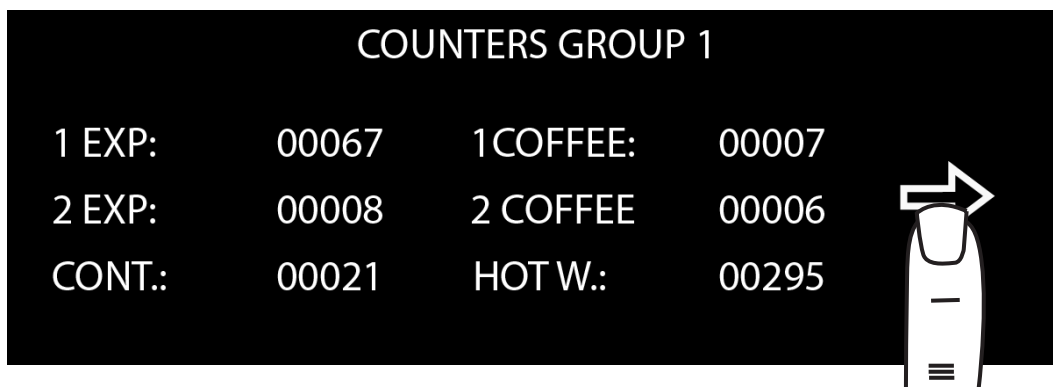


3. The total counters screen displays drinks across all groups. It also counts upwards towards the number of cycles set for maintenance intervals and water softener exchanges. These values are indicative only and are a set depending on the expected usage of the machine and the water hardness in the area it is installed.



WARNING: The maintenance counter is only an indication of when the next service is due. Maintenance may be required more often depending on machine usage, water hardness, etc. It is also a legal requirement under the HSE PSSR Act of 2000 to have the boiler inspected and tested annually. Please contact Fracino or an authorised service agent for further information, or to arrange a boiler test examination. A Written Scheme of Examination is available in the supplied installation manual. **THE MAINTENANCE COUNTER IS NOT AN INDICATION OF WHEN THE BOILER IS DUE FOR INSPECTION OR TESTING.**

Resetting the coffee counters

1. Enter the counters screens and scroll all the way through.

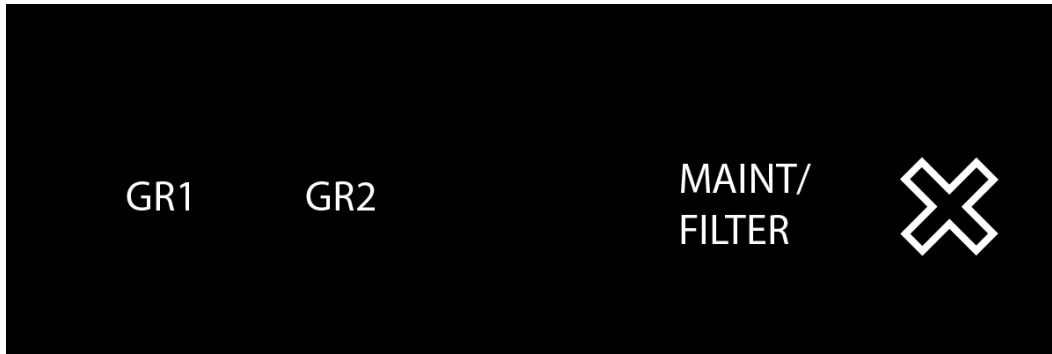


2. Select which counter to reset




3. Reset the group counter by pressing enter, or to exit the screen press the X icon.



4. Selecting MAINT/FILTER will display a login screen. These counters can only be reset by authorised engineers.

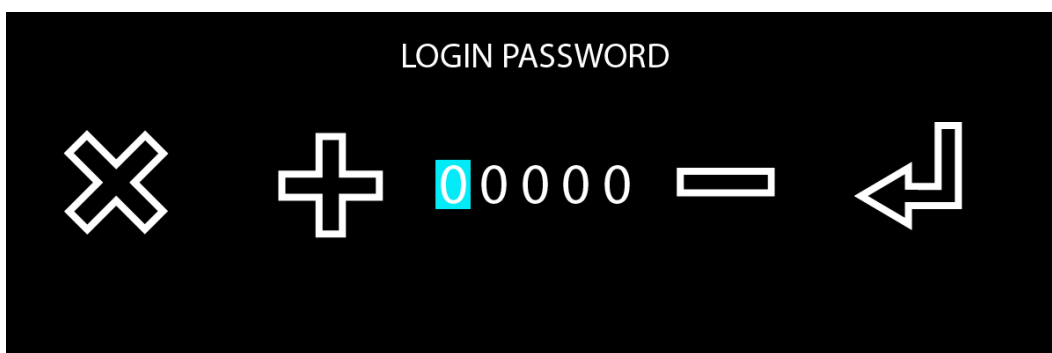


Programming coffee measures

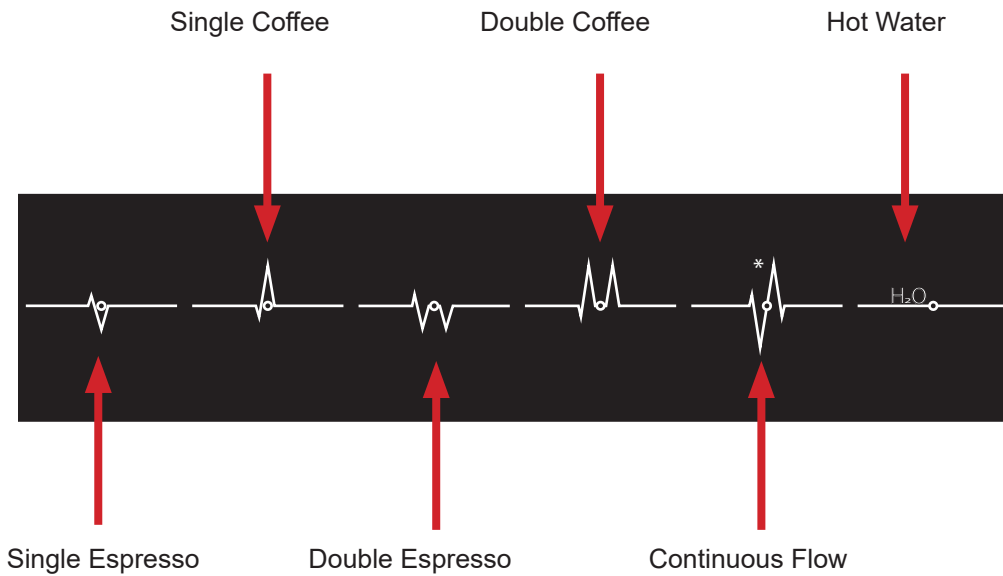


1) Machines with two or more groups are programmed on the left hand group/touch pad. When the process is completed the settings will be stored for all groups. Any groups to the right can be programmed independently by following the same procedure.

2) Put one shot of coffee into a single filter holder and fit the holder into the left hand group as shown at the start of this section.

3) Put the espresso cup under the beak.

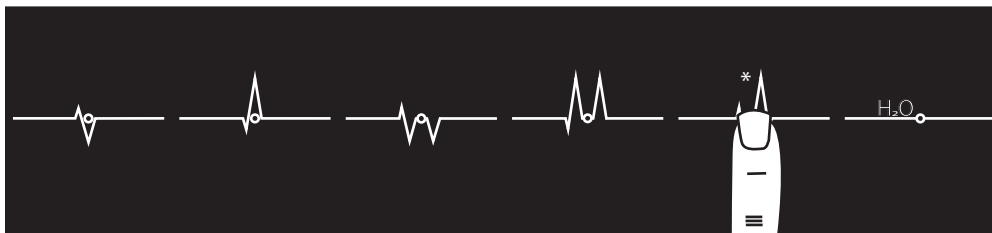

4) Press and hold the continuous hold button until it starts to flash. The machine is now in program mode.

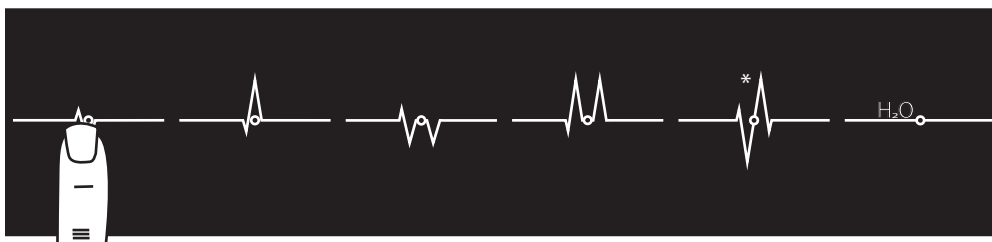

5) Press the single espresso button within 5 seconds and allow the coffee to fill the cup to the required level. Press the button again to stop and store the setting

Note: If the button is not pressed within 30 seconds the machine will revert back to the previous settings and you will need to repeat the this step again.

Repeat steps 1-5 for:

Single Coffee: use the single filter holder, one shot of coffee, an espresso, cappuccino or latte cup.

Double Espresso: use the double filter holder, two shots of coffee and two espresso cups.


Double Coffee: use the double filter holder, two shots of coffee, two espresso, cappuccino or latte cups.

Programming coffee measures - alternative method


Note: Programming the coffee measures this way will override the previous measures set.



1) Press the power icon on screen 4.

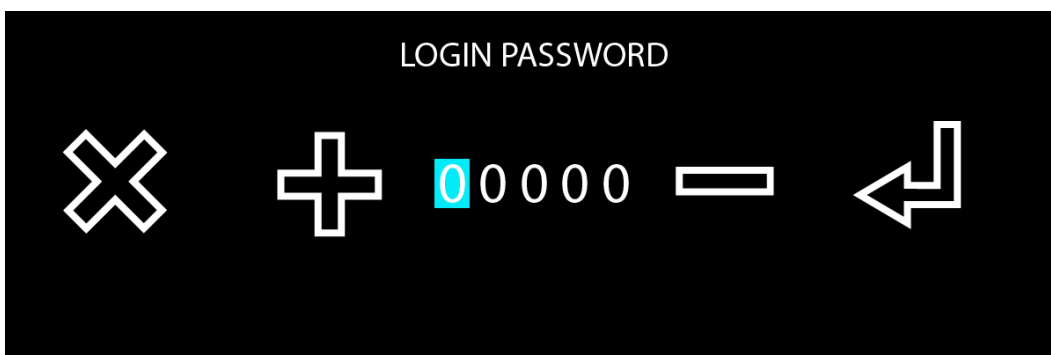


2) Press the cog icon, then enter the user login password which is 33333. Use the plus and minus icons to scroll through the numbers and the arrow icon to enter.

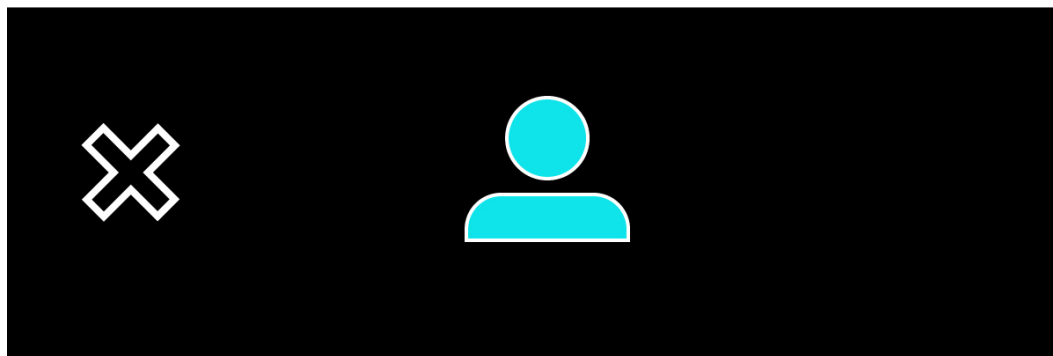

3) Press the user icon to enter the user menu.




4) Use the left and right arrows to scroll through the menu. Use the enter icon to enter a setting.

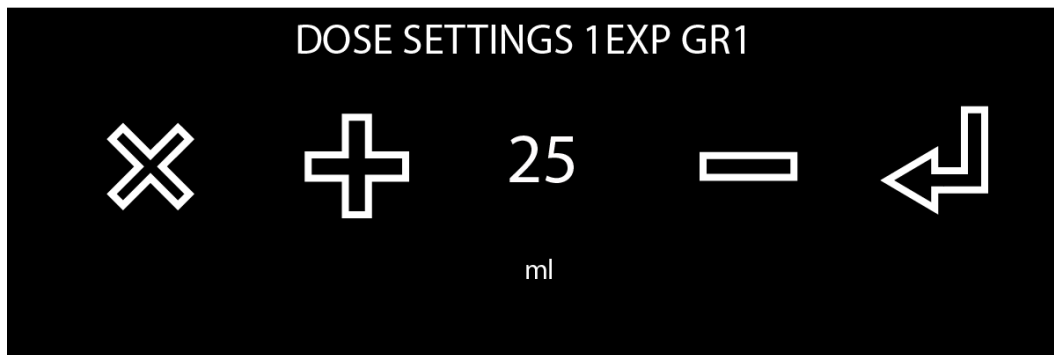

5) Use the plus and minus icons to set the drinks measure (ml). Use the enter icon to save the setting and use the X icon to exit.



6) Continue to scroll through the menu to adjust the coffee and hot water measures. Once you reach the end of the menu use the enter icon to exit.

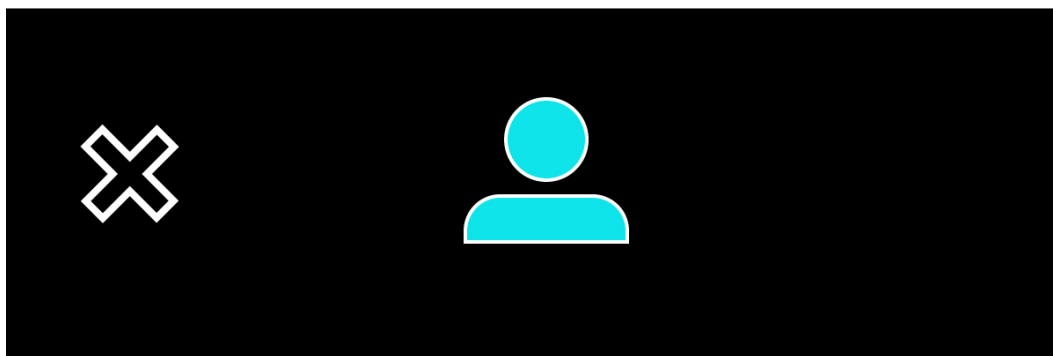

7) Use the X icon to exit.

01/12/2021

17:11



8) Select the power icon to return to the main screen.

V.2.1



Fracino Birch Road East, Birmingham, B6 7DB, Great Britain.
Website / www.fracino.com Email / sales@fracino.com
Tel / +44 (0)121 328 5757 Fax / +44 (0)121 327 3333

The Fracino company policy is one of continuous improvement. We retain the right to change specification without prior notice.